



ORDER BY PART NUMBER, NOT CODE NUMBER

CODE NO.	PART NO.	NO. REQ.	DESCRIPTION	CODE NO.	PART NO.	NO. REQ.	DESCRIPTION
1	1876	1	Stopper Assembly (Includes Codes 2-6)	30	71022	1	Rotating Shredder Assy
2	1875	1	Stopper, Handle	31	14140	1	Upper End Bell Assy (Incl. Code 36)
3	1144	1	Gasket, Stopper (Inner)	32	1470	1	Gasket, Tailpipe
4	5015C	1	Gasket, Body	33	70076	1	Tailpipe
5	5045	1	Ring, Retaining	34	5490	1	Flange, Tailpipe
6	5029	1	Gasket, Stopper (Outer)	35	1491	1	Screw, Tailpipe
7	10025B	1	Flange, Strainer	36	14148	1	Insulation, UEB
8	8763	2	Seal, Sink Flange	37	13691B	1	Cover, Trim Bottom
9	1160	1	Gasket, Sink Flange	38	14151A	1	Stator Assembly
10	5150E	1	Flange, Backup	39	14138	1	Rotor & Shaft Assembly (Incl. Codes 40)
11	5141	1	Flange, Mounting	40	2642	1	Washer
12	5147	3	Screw, Backup	41	2467A	1	Switch Centrifugal
13	5166	1	Ring, Retaining	42	4134	1	Shield Wire
14	1010A	1	Gasket, Mounting	43	70360A	1	Switch, Start Reverse
15	5298	1	Flange, Body	44	13734	1	Protector, Overload
16	2567A	1	Trim Cover, Top	45	13579	1	Capacitor
17	14128	1	Trim Shell Assembly	46	71425	1	Clip Capacitor
18	8320	1	Insulation	47	70424	1	Lower End Frame Assembly
19	9872G	1	Body Container Assembly (Incl. Codes 21 & 22)	48	9121A	4	Screw, #10-24 Pan Hd
20	71788	3	Screw, Body Container	49	70999	1	Screw, Ground
21	8797	1	Clamping Ring	50	71387	1	Terminal Cover
22	4395	1	Gasket, Shredder	51	70734	1	Screw, Terminal Cover
23	1248A	1	Shredder, Stationary	52	70440A	1	Cord Assembly
24	70647	1	Sleeve & Seal Kit (Incl. Codes 25-29)	53	70667	1	Bushing
25	2854	1	Plug	54	2610TE	1	Instruction Assy (Not Shown) (Incl. Codes 8, 32-35 & 55)
26	N/A	1	Bolt, Hex Head Flange	55	10097B	1	Installation, Use & Care Booklet (Not Shown)
27	N/A	1	Slinger				
28	N/A	1	Seal				
29	N/A	1	Sleeve				